


Installation

1. Attach the side collars to the wheel.
2. On the right side, place the wheel between the fork legs and insert the front axle shaft, through the right fork leg and wheel hub.
3. Align the index line of the front axle shaft with the recessed surface of the fork leg.

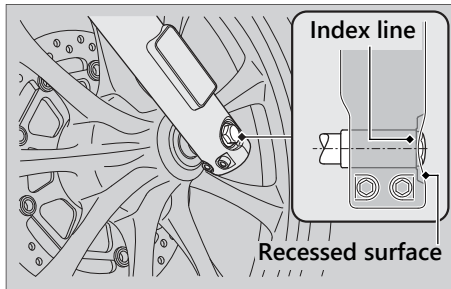

4. Tighten the right axle pinch bolts.

Torque: 16 lbf-ft (22 N·m, 2.2 kgf·m)

5. Tighten the front axle bolt.

Torque: 47 lbf-ft (64 N·m, 6.5 kgf·m)

6. Install the brake caliper and tighten the fixing bolts.

Torque: 23 lbf-ft (31 N·m, 3.2 kgf·m)

NOTICE

When installing a wheel or caliper into original position, carefully fit the brake disc between the pads to avoid scratching them.

7. After installing the wheel, apply the brake lever several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.